

INSTALLATION



ID ISC.ANT.U600/270-EU

30° UHF Antenna



Note

© Copyright 2014 by
FEIG ELECTRONIC GmbH
Lange Strasse 4
D-35781 Weilburg
Tel.: +49 6471 3109-0
<http://www.feig.de>

With the edition of this document, all previous editions become void. Indications made in this manual may be changed without previous notice.

Copying of this document, and giving it to others and the use or communication of the contents thereof are forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of the grant of a patent or the registration of a utility model or design.

Composition of the information in this document has been done to the best of our knowledge. FEIG ELECTRONIC GmbH does not guarantee the correctness and completeness of the details given in this manual and may not be held liable for damages ensuing from incorrect or incomplete information. Since, despite all our efforts, errors may not be completely avoided, we are always grateful for your useful tips.

The instructions given in this manual are based on advantageous boundary conditions. FEIG ELECTRONIC GmbH does not give any guarantee promise for perfect function in cross environments and does not give any guaranty for the functionality of the complete system which incorporates the subject of this document.

FEIG ELECTRONIC call explicit attention that devices which are subject of this document are not designed with components and testing methods for a level of reliability suitable for use in or in connection with surgical implants or as critical components in any life support systems whose failure to perform can reasonably be expected to cause significant injury to a human. To avoid damage, injury, or death, the user or application designer must take reasonably prudent steps to protect against system failures.

Use Exclusion in Transportation Market: Devices which are subject of this document may NOT be sold, used, leased, offer for sale, or otherwise transferred, exported, and imported by anyone in the Transportation Market. "Transportation Market" means (i) Electronic Toll and Traffic Management (ETTM), (ii) Public Sector Vehicle Registration, Inspection and Licensing Programs, (iii) Railroad Locomotive and Wagon tracking, (iv) airport based ground transportation management systems (GTMS) and taxi dispatch, (v) revenue based parking, and (vi) vehicle initiated mobile payment applications, where the RFID sticker/tag is initially attached to the vehicle but not incorporated at the point of vehicle manufacture.

FEIG ELECTRONIC GmbH assumes no responsibility for the use of any information contained in this document and makes no representation that they free of patent infringement. FEIG ELECTRONIC GmbH does not convey any license under its patent rights nor the rights of others.

OBID® and OBID i-scan® are registered trademarks of FEIG ELECTRONIC GmbH.

General information's regarding this document

- The sign "☞" indicates extensions or changes of this manual compared with the former issue.
- If bits within one byte are filled with "-", these bit spaces are reserved for future extensions or for internal testing- and manufacturing-functions. These bit spaces must not be changed, as this may cause faulty operation of the reader.
- The following figure formats are used:
 - 0...9: for decimal figures
 - 0x00...0xFF: for hexadecimal figures,
 - b0...1 for binary figures.
- The hexadecimal value in brackets "[]" marks a control byte (command).

Contents

1. Safety Instructions / Warning - Read before start-up !	5
2. Performance Features of the Antenna ANT.U600/270-EU	6
3. Installation	7
<hr/>	
3.1. Mounting Holes.....	7
3.2. Installation with Mounting Set.....	8
3.3. Draining Holes	9
3.4. Membrane for pressure balance.....	10
3.5. Antenna cable.....	11
<hr/>	
4. VSWR	12
5. Antenna Pattern	13
6. Technical Data	15

1. Safety Instructions / Warning - Read before start-up !

- The device may only be used for the intended purpose designed by for the manufacturer.
- The operation manual should be conveniently kept available at all times for each user.
- Unauthorized changes and the use of spare parts and additional devices which have not been sold or recommended by the manufacturer may cause fire, electric shocks or injuries. Such unauthorized measures shall exclude any liability by the manufacturer.
- The liability-prescriptions of the manufacturer in the issue valid at the time of purchase are valid for the device. The manufacturer shall not be held legally responsible for inaccuracies, errors, or omissions in the manual or automatically set parameters for a device or for an incorrect application of a device.
- Repairs may only be executed by the manufacturer.
- Installation, operation, and maintenance procedures should only be carried out by qualified personnel.
- Use of the device and its installation must be in accordance with national legal requirements and local electrical codes .
- When working on devices the valid safety regulations must be observed.
- Special advice for carriers of cardiac pacemakers:
Although this device doesn't exceed the valid limits for electromagnetic fields you should keep a minimum distance of 25 cm between the device and your cardiac pacemaker and not stay in an immediate proximity of the device respective the antenna for some time.

2. Performance Features of the Antenna ANT.U600/270-EU

The antenna ID ISC.ANT.U600/270 Type –EU is a circular polarized antenna and can be used at operating frequencies in the UHF range from 865 MHz – 870 MHz.

Due to the circular polarization reading of Transponders in two orientations is possible.

The antenna is optimized for the in Europe to RFID applications dedicated UHF frequency band. In this frequency band the antenna offers best possible reading performance.

Due to the particular antenna design the 3 dB beam width is reduced to 30° in the H-plane. The antenna has nearly twice the gain of the standard UHF antenna ID ISC.ANT.U270/270. It is the most powerful antenna of the OBID i-scan® UHF family.

Table 1: Ordering Information - Antenna

Description	Type	Frequency	Order Number
Antenna ID ISC.ANT.U600/270	-EU	865 MHz – 870 MHz	3198.000.00

3. Installation

3.1. Mounting Holes

The antenna is designed for wall or fixture mounting. Mounting holes are provided in the housing. Please note that only these holes should be used when mounting the antenna.

An optional mounting set is available to simplify the attachment of the antenna to portal structures or poles and can be ordered from FEIG ELECTRONIC GmbH.

NOTE:

When fastening the screws it must be ensured that the housing of the antenna is not bend. Optionally the attachment points should be supported by suitable washers or spacers (Height 14 mm).

If mounted outside the preferred mounting direction of the antenna is vertical with the connection cable towards ground.

Never mount the antenna in a way that the connection cable is guided to the top.

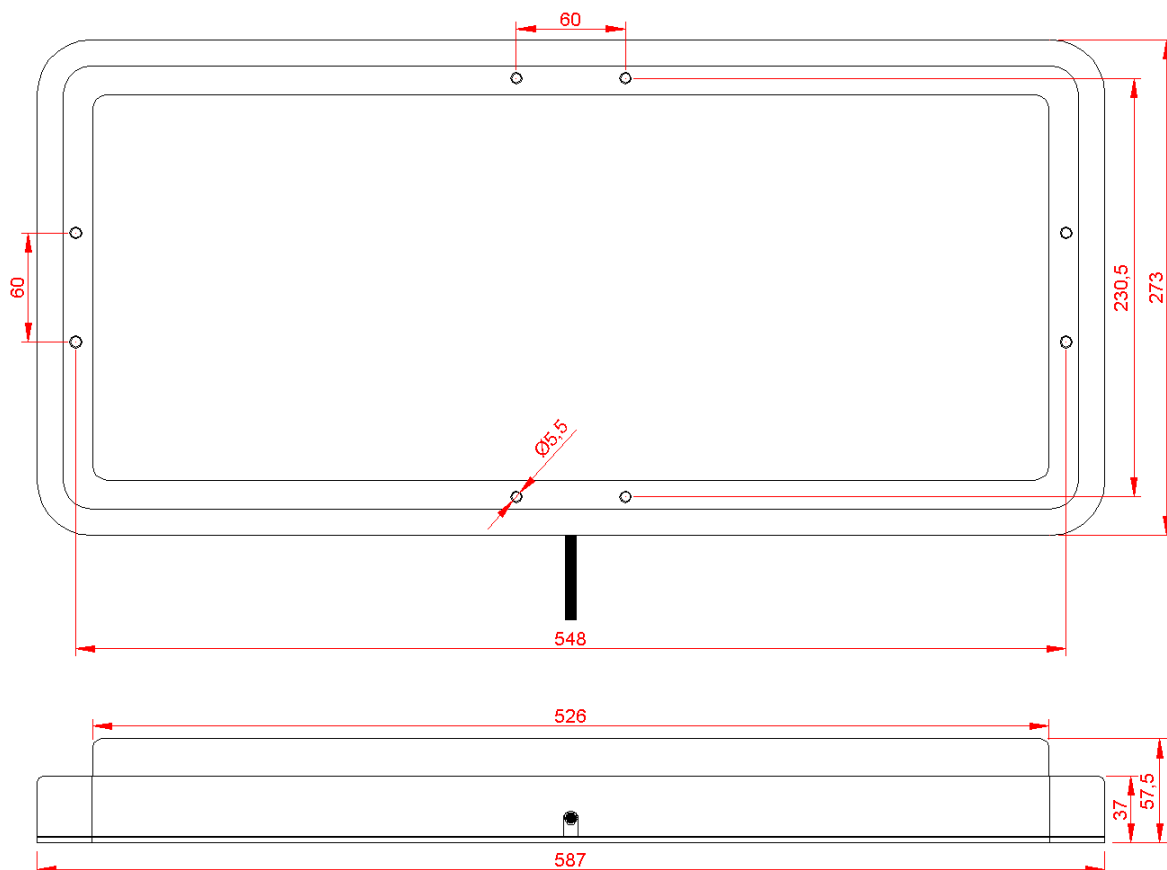


Figure 1: Mounting Drawing

CAUTION:

Bending radius of the connection cable: 15 mm (static) / 30 mm (dynamic)

3.2. Installation with Mounting Set

A special mounting set provides an easy method of mounting of the antenna at a portal, mast, pole or bar. After mounting, the antenna can be changed and positioned at three orientations.



Figure 2: Mounting Set with Antenna

Table 2: Ordering Information - Mounting Set

Description	Order number
ID ISC.ANT.U600/270-MS Mounting Set Antenna UHF	3308.000.00.00

3.3. Draining Holes

There are two draining holes inside the housing at the bottom left- and right corner of the antenna. These holes are used to guide condensing water out of the outer circle of the housing.

NOTE:

The protection class of the antenna is not affected by the draining holes. The blocking that guarantees the protection class of IP65 is inside the housing.

Water in the outer circle of the housing does not have any impact on the performance of the antenna.



Figure 3: Draining holes at the bottom left- and right corner of the antenna

3.4. Membrane for pressure balance

At the back of the antenna there is a small hole covered with a thin membrane that is used for pressure balance between the air inside the housing and the air outside the housing. The membrane is water resistant and does not influence the protection class of the antenna.



Figure 4: Membrane for pressure balance

CAUTION:

To keep the full protection class and to prevent performance losses of the antenna it needs to be ensured that the membrane is not damaged.

3.5. Antenna cable

There are two antenna cable assemblies available for the extension of the antenna cable. These cable assembly can be ordered by FEIG ELECTRONIC GmbH in a two meter (2 m) or six meter (6 m) version.

Table 3: Ordering Information - Antenna Cable

Length	Description	Order number
2 meter	ID ISC.ANT.C2-A UHF Antenna Cable 2m	1654.002.00.00
6 meter	ID ISC.ANT.C6-A UHF Antenna Cable 6m	1654.003.00.00

Note:

The maximum tightening torque of the SMA jack is 0,45 Nm (4.0 lbf in).

4. VSWR

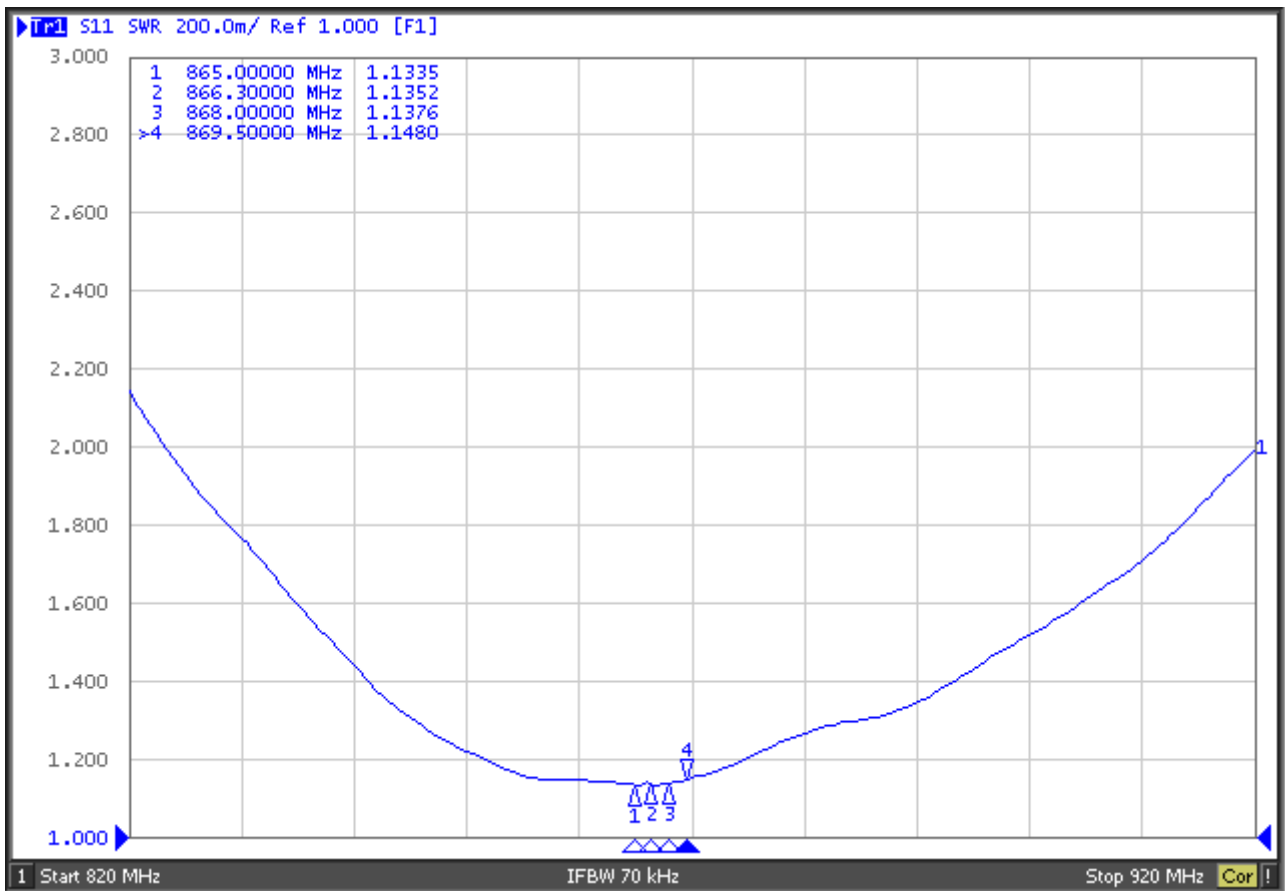


Figure 5: Typical VSWR of the antenna ID ISC.ANT.U600/270-EU

5. Antenna Pattern

The 3 dB Beamwidth of the antenna is 65° x 30°.

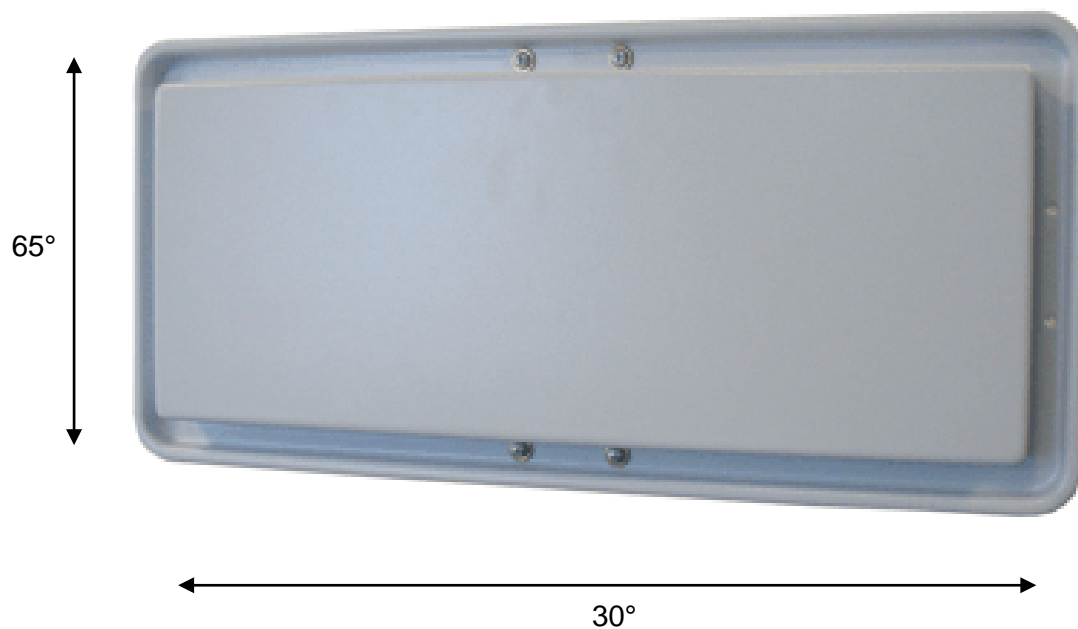


Figure 6: 3 dB Beamwidth

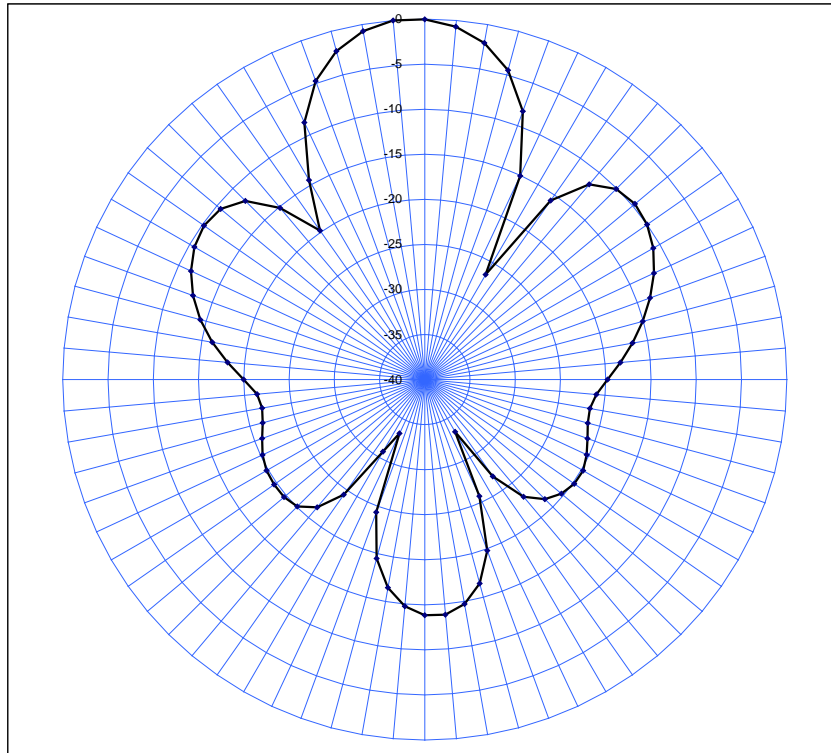


Figure 7: Typical antenna pattern of the Antenna ID ISC.ANT.U600/270-EU horizontal

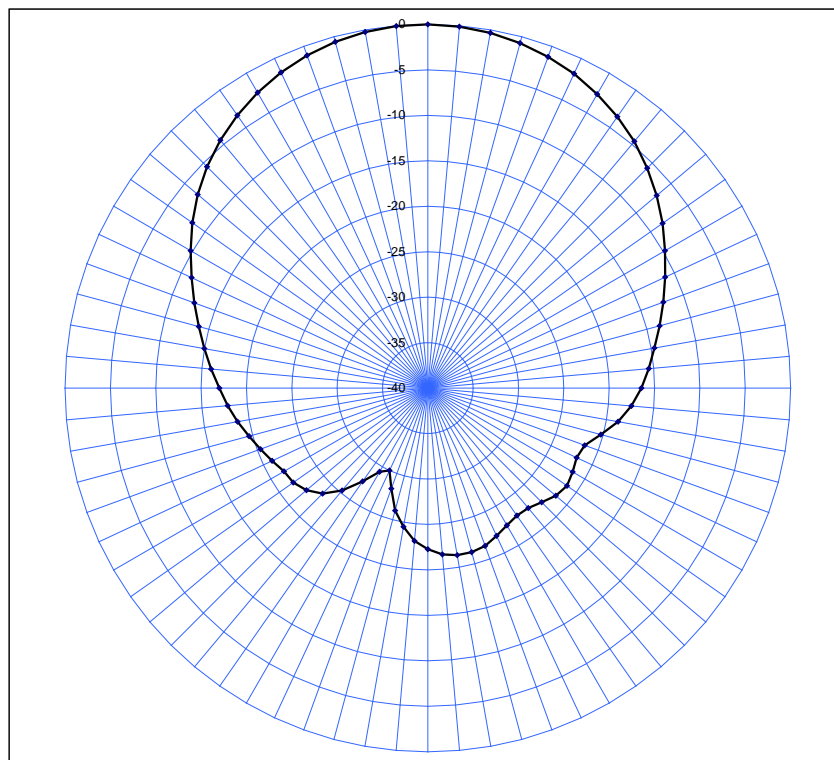


Figure 8: Typical antenna pattern of the Antenna ID ISC.ANT.U600/270-EU vertical

6. Technical Data

MECHANICAL DATA

Housing	Plastic ASA/ABS
Dimension (W x H x D)	587 mm x 273 mm x 58 mm
Weight	approx. 2200 g
Protection Class	IP 65
Color	White

ELECTRICAL DATA

Operating Frequency	865 MHz to 870 MHz
Gain, typ.	11,0 dBic
3 dB Beamwidth	
• E-Plane	65°
• H-Plane	30°
Polarization	Circular
VSWR	< 1,3:1
Antenna Connector	SMA socket (50 Ω)

AMBIENT CONDITIONS

Temperature Range	
• Operation	-25 °C to +55 °C
• Storage	-25 °C to +80 °C

MECHANICAL DATA MOUNTING SET

Material	Aluminum, steel zinc-plate
Clamping zone for circular profiles	30 mm to 60 mm
Weight	approx. 580 g
Alignment of the antenna	Adjustable at three orientations